

Parts Catalog




EOS 30D

REF. NO.C12-6131

PARTS CATALOG

CANON DIGITAL CAMERA EOS 30D

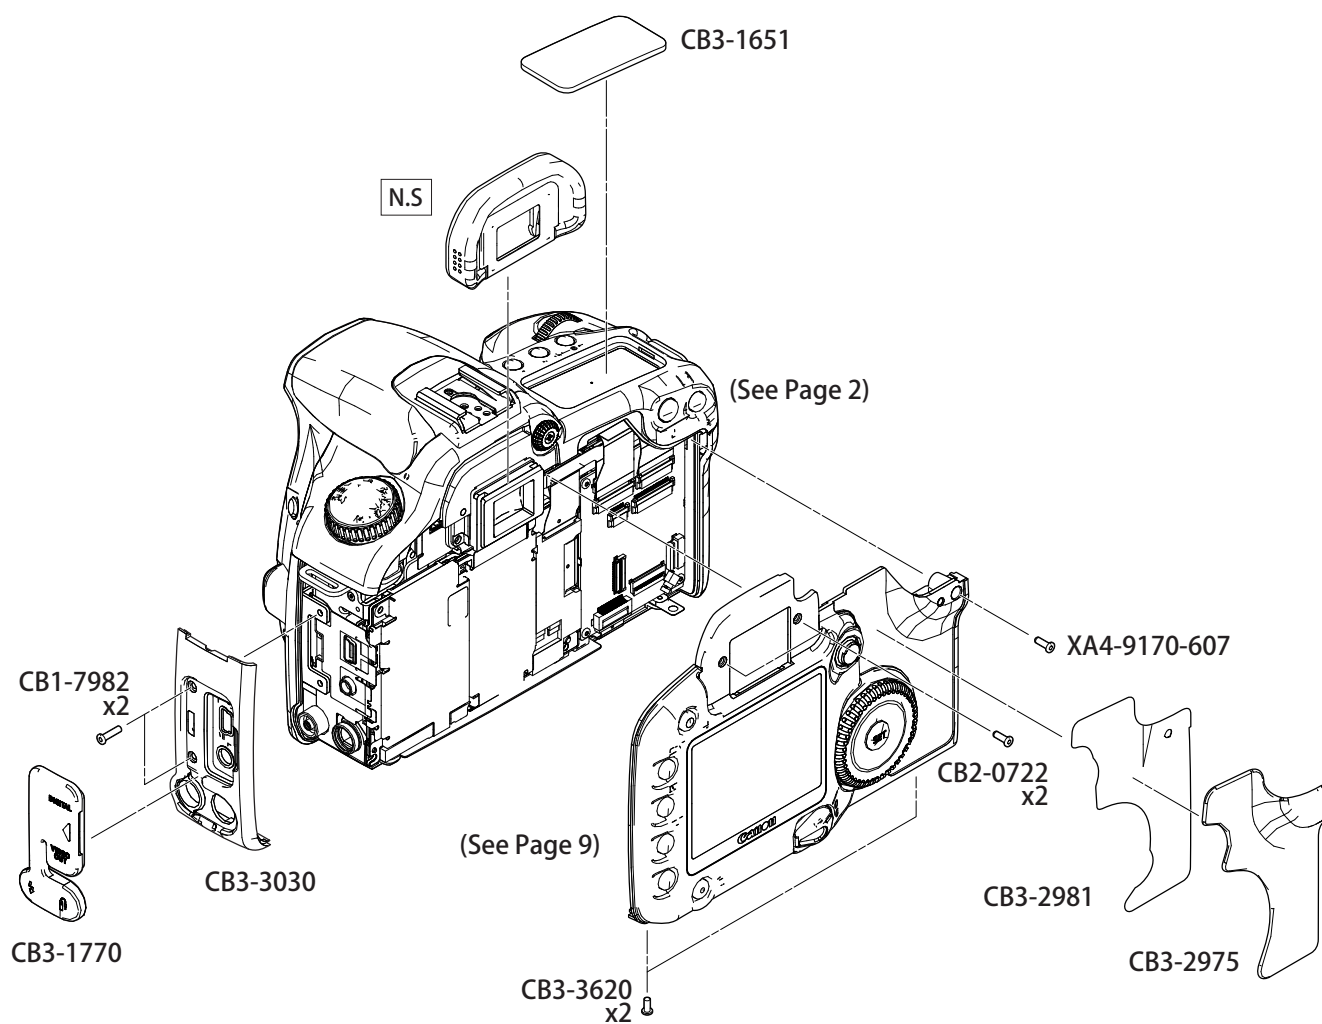


P A R T S L I S T

Pg. 1

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-7982-000 000	C	2	SCREW
	CB2-0722-000 000	C	2	SCREW, M1.7X5
	CB3-1651-000 000	B	1	WINDOW, DISPLAY
	CB3-1770-000 000	B	1	CAP, INTERFACE
*	CB3-2975-000 000	B	1	COVER, BACK HOLDING
*	CB3-2981-000 000	B	1	TAPE, DOUBLE SIDE
*	CB3-3030-000 000	C	1	COVER, INTERFACE
*	CB3-3620-000 000	C	2	SCREW, M1.7X4
	XA4-9170-607 000	F	1	SCREW

CANON DIGITAL CAMERA EOS 30D

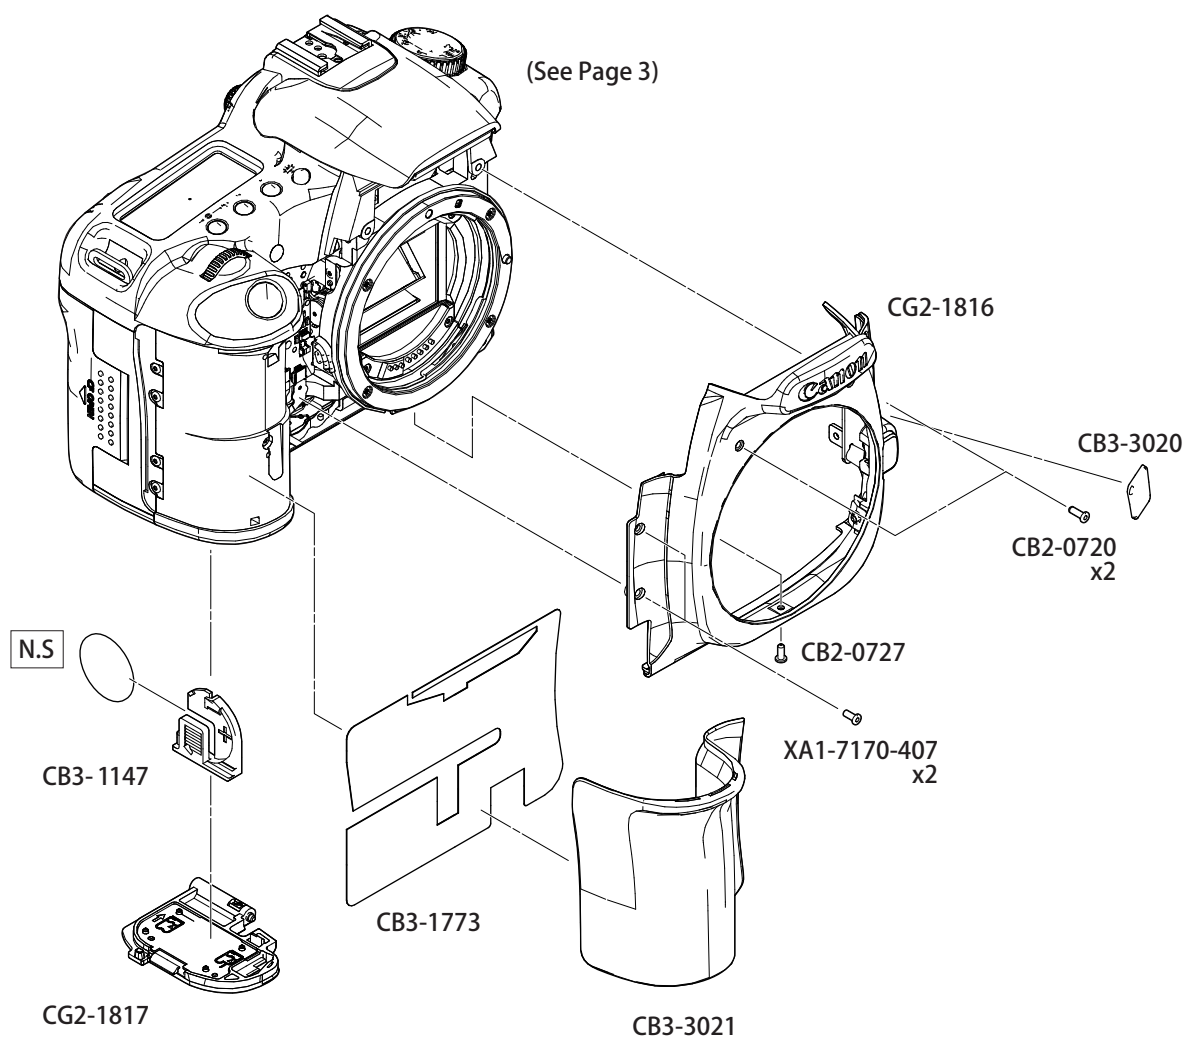


P A R T S L I S T

Pg. 2

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB2-0720-000 000	C	2	SCREW, M1.7X6
	CB2-0727-000 000	C	1	SCREW, M1.7X4.5
	CB3-1147-000 000	C	1	CASE, BATTERY
	CB3-1773-000 000	B	1	TAPE, DOUBLE SIDE
*	CB3-3020-000 000	C	1	PLATE, NAME
*	CB3-3021-000 000	B	1	COVER, GRIP HOLDING
*	CG2-1816-000 000	B	1	COVER ASS'Y, FRONT
*	CG2-1817-000 000	B	1	COVER ASS'Y, BATTERY
	XA1-7170-407 000	F	2	SCREW

CANON DIGITAL CAMERA EOS 30D

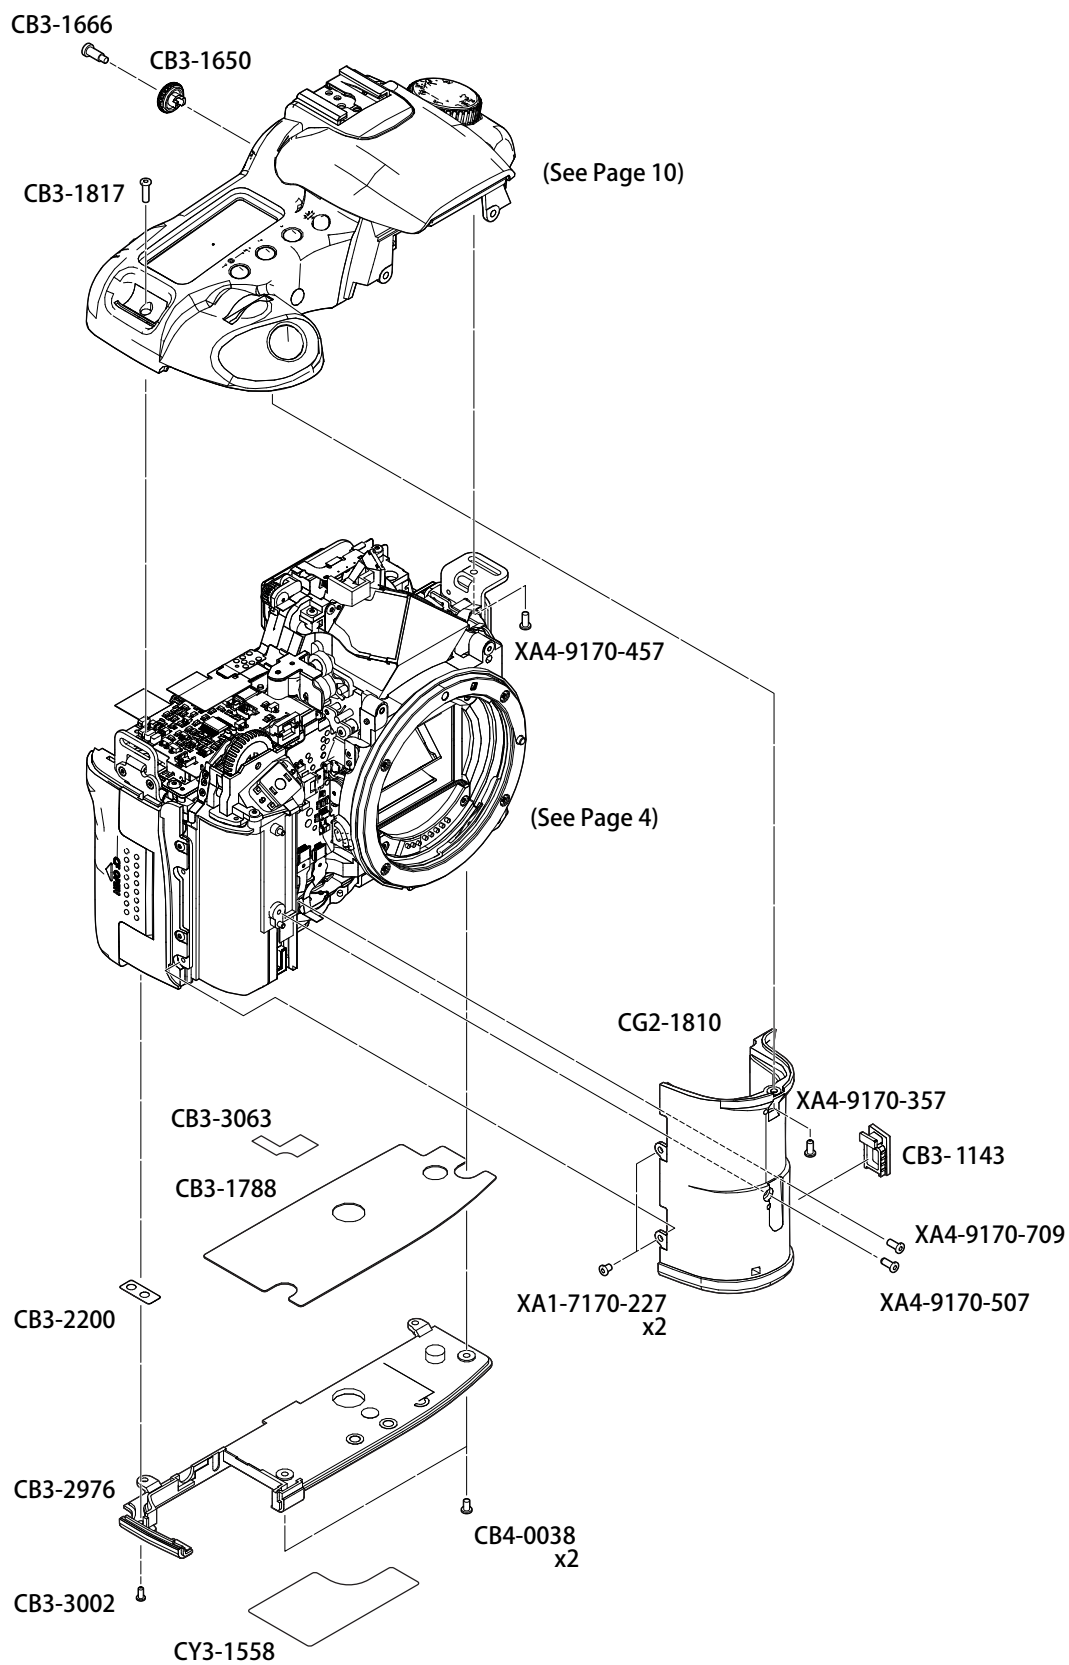


PARTS LIST

Pg. 3

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB3-1143-000 000	C	1	DOOR, CABLE
	CB3-1650-000 000	C	1	DIAL, DIOPTER CORRECTION
	CB3-1666-000 000	C	1	SCREW
*	CB3-1788-000 000	C	1	PLATE, BOTTOM SHIELD
	CB3-1817-000 000	C	1	SCREW
	CB3-2200-000 000	B	1	TAPE, CONDUCTIVE BOTTOM COVER
*	CB3-2976-000 000	C	1	COVER, BOTTOM
*	CB3-3002-000 000	C	1	SCREW
*	CB3-3063-000 000	B	1	TAPE, SHIELD
	CB4-0038-000 000	C	2	SCREW
*	CG2-1810-000 000	C	1	GRIP ASS'Y
*	CY3-1558-000 000	B	1	LABEL, BODY NUMBER
	XA1-7170-227 000	F	2	SCREW
	XA4-9170-357 000	F	1	SCREW
	XA4-9170-457 000	F	1	SCREW
	XA4-9170-507 000	F	1	SCREW
	XA4-9170-709 000	F	1	SCREW

CANON DIGITAL CAMERA EOS 30D

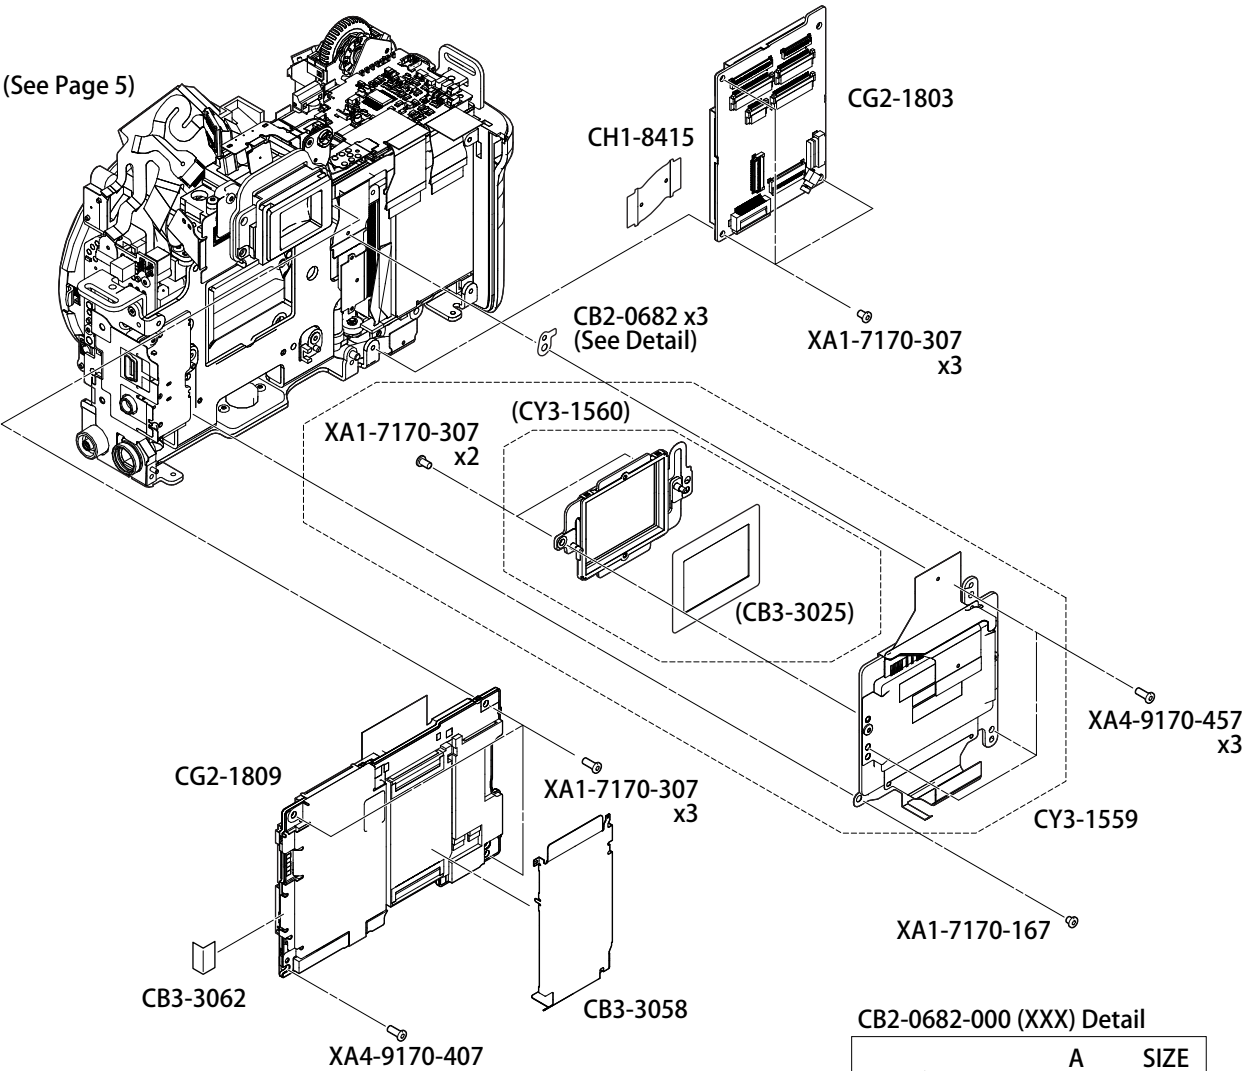

CB2-0682-000 (XXX) Detail

	A	SIZE
	0.03mm	(003)
	0.05mm	(005)
	0.08mm	(008)
	0.10mm	(010)
	0.12mm	(012)
	0.15mm	(015)
	0.18mm	(018)
	0.20mm	(020)
	0.25mm	(025)
	0.30mm	(030)
	0.35mm	(035)


P A R T S L I S T

Pg. 4

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB2-0682-000 (XXX)	C	3	WASHER, FLANGE BACK
*	CB3-3025-000 000	B	1	TAPE, DOUBLE SIDE
*	CB3-3058-000 000	N	1	COVER, D PCB SHIELD
*	CB3-3062-000 000	C	1	TAPE, SHIELD
*	CG2-1803-000 000	B	1	PCB ASS'Y, C
*	CG2-1809-000 000	B	1	PCB ASS'Y, D
*	CH1-8415-000 000	C	1	FPC, CD CONNECT
*	CY3-1559-000 000	B	1	CMOS SENSOR ASS'Y
*	CY3-1560-000 000	B	1	FILTER ASS'Y, LOW PASS
	XA1-7170-167 000	F	1	SCREW
	XA1-7170-307 000	F	8	SCREW
	XA4-9170-407 000	F	1	SCREW
	XA4-9170-457 000	F	3	SCREW

CANON DIGITAL CAMERA EOS 30D

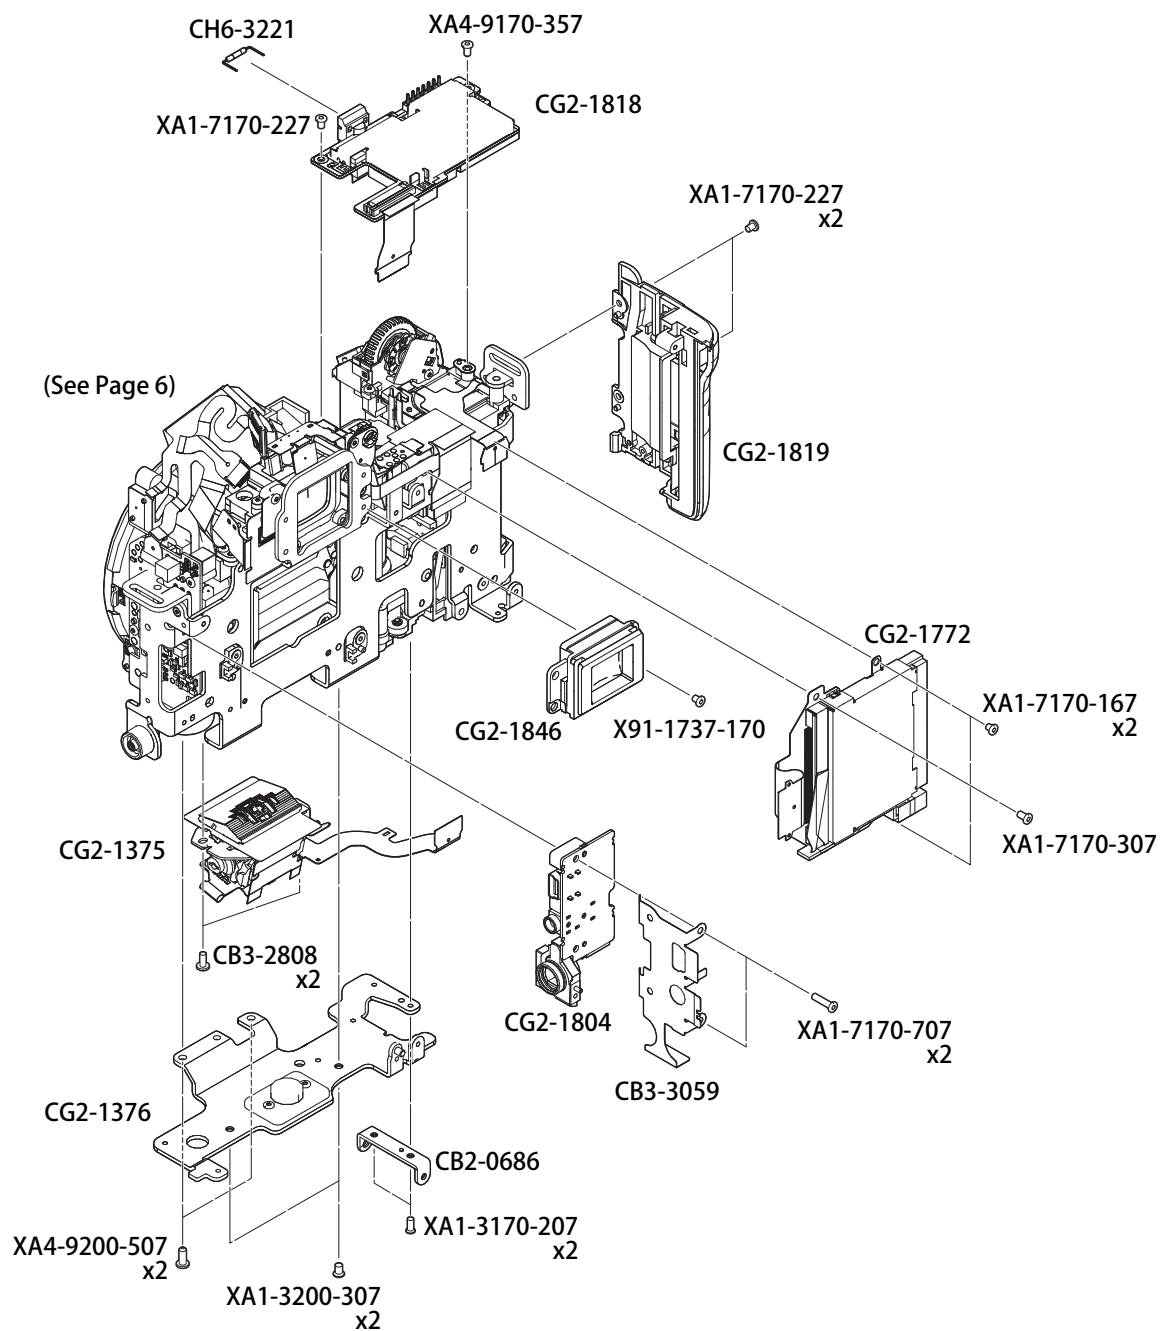


PARTS LIST

Pg. 5

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB2-0686-000 000	C	1	HINGE, B-DOOR
	CB3-2808-000 000	C	2	SCREW
*	CB3-3059-000 000	C	1	PLATE, I/F SHIELD
*	CG2-1375-000 000	C	1	FPC ASS'Y, AF
	CG2-1376-000 000	C	1	PLATE ASS'Y, BASE
*	CG2-1772-000 000	B	1	PIN ASS'Y, CF SLOT
*	CG2-1804-000 000	C	1	PCB ASS'Y, I/F
*	CG2-1818-000 000	B	1	PCB ASS'Y, DC/DC
*	CG2-1819-000 000	C	1	COVER ASS'Y, CF SLOT
*	CG2-1846-000 000	B	1	COVER ASS'Y, EYEPIECE
	CH6-3221-000 000	C	1	LAMP, HALOGEN
	X91-1737-170 000	F	1	SCREW
	XA1-3170-207 000	F	2	SCREW
	XA1-3200-307 000	F	2	SCREW
	XA1-7170-167 000	F	2	SCREW
	XA1-7170-227 000	F	3	SCREW
	XA1-7170-307 000	F	1	SCREW
	XA1-7170-707 000	F	2	SCREW
	XA4-9170-357 000	F	1	SCREW
	XA4-9200-507 000	F	2	SCREW

CANON DIGITAL CAMERA EOS 30D

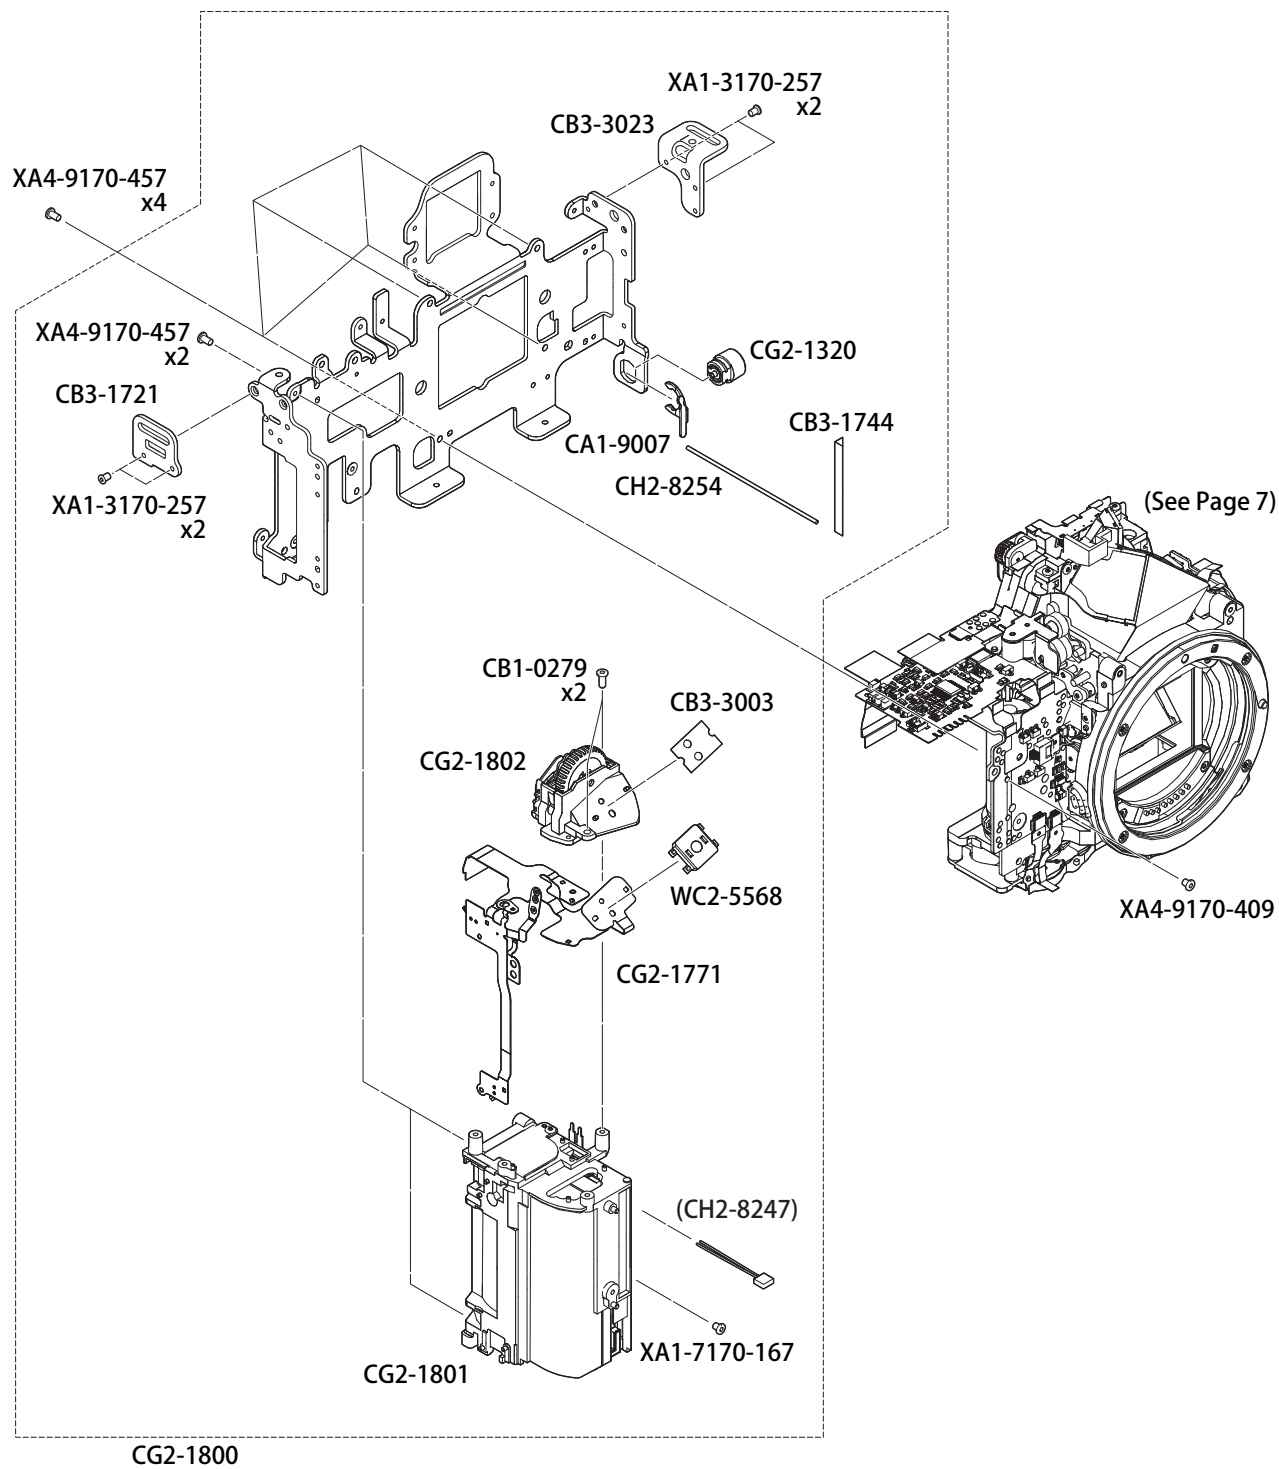


PARTS LIST

Pg. 6

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9007-000 000	D	1	RING, PC RETAINER
	CB1-0279-000 000	C	2	SCREW
	CB3-1721-000 000	C	1	HOLDER, STRAP, RIGHT
	CB3-1744-000 000	C	1	PLATE, LIGHT SHIELD
*	CB3-3003-000 000	C	1	TAPE, RELEASE
*	CB3-3023-000 000	C	1	HOLDER, STRAP, LEFT
	CG2-1320-000 000	B	1	TERMINAL ASS'Y, PC
*	CG2-1771-000 000	C	1	FPC ASS'Y, RELEASE
*	CG2-1800-000 000	C	1	PLATE ASS'Y, MAIN BASE
*	CG2-1801-000 000	C	1	CASE ASS'Y, BATTERY
*	CG2-1802-000 000	C	1	DIAL ASS'Y
*	CH2-8247-000 000	N	1	WIRE, LEAD
*	CH2-8254-000 000	N	1	WIRE, LEAD
*	WC2-5568-000 000	C	1	SWITCH, RELEASE
	XA1-3170-257 000	F	4	SCREW
	XA1-7170-167 000	F	1	SCREW
	XA4-9170-409 000	F	1	SCREW
	XA4-9170-457 000	F	6	SCREW

CANON DIGITAL CAMERA EOS 30D

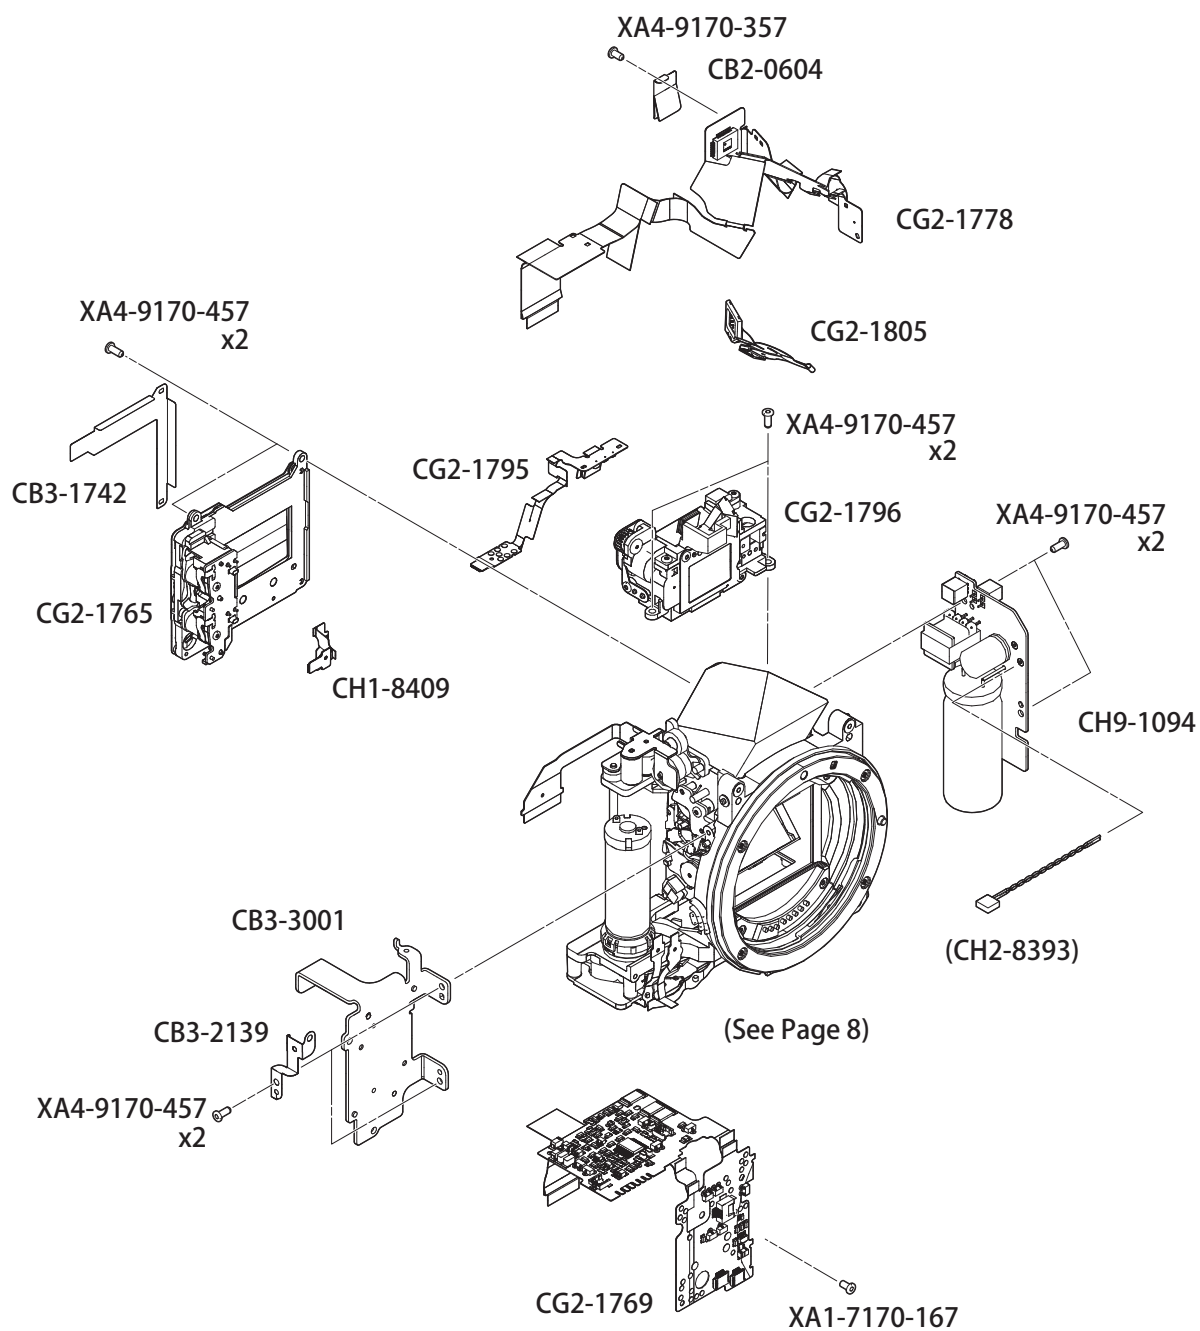


PARTS LIST

Pg. 7

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB2-0604-000 000	C	1	SPRING, PLATE
	CB3-1742-000 000	C	1	SHEET, SHUTTER LIGHT SHIELD
	CB3-2139-000 000	N	1	PLATE, GROUND LUG
*	CB3-3001-000 000	N	1	PLATE, WING
*	CG2-1765-000 000	B	1	SHUTTER ASS'Y
*	CG2-1769-000 000	B	1	FPC ASS'Y, MD
*	CG2-1778-000 000	C	1	FPC ASS'Y, EXPOSURE PROCESSING
*	CG2-1795-000 000	B	1	FPC ASS'Y, AE
*	CG2-1796-000 000	C	1	EYEPIECE ASS'Y
*	CG2-1805-000 000	C	1	FPC ASS'Y, SI
*	CH1-8409-000 000	C	1	FPC, SHUTTER
*	CH2-8393-000 000	N	1	WIRE, LEAD
*	CH9-1094-000 000	B	1	PCB ASS'Y, FLASH
	XA1-7170-167 000	F	1	SCREW
	XA4-9170-357 000	F	1	SCREW
	XA4-9170-457 000	F	8	SCREW

CANON DIGITAL CAMERA EOS 30D

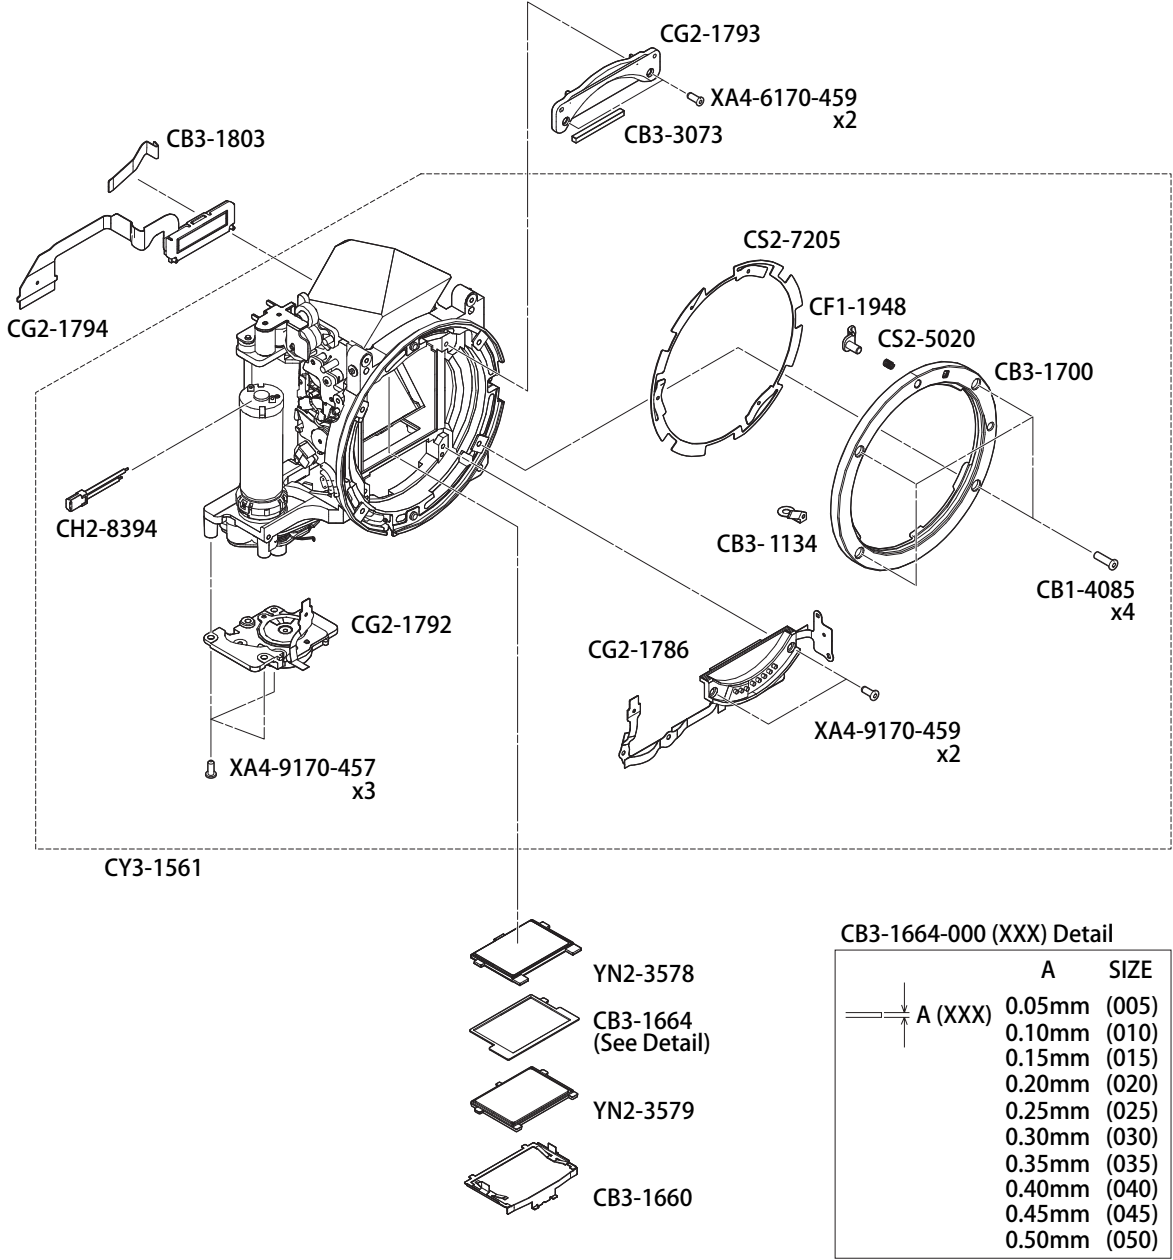


PARTS LIST

Pg. 8

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-4085-000 000	C	4	SCREW,M2X6.5
	CB3-1134-000 000	N	1	PLATE, GRAND
	CB3-1660-000 000	C	1	FRAME, SCREEN MOUNTING
	CB3-1664-000 (XXX)	C	1	WASHER, FINDER BACK ADJUST
	CB3-1700-000 000	C	1	MOUNT
	CB3-1803-000 000	N	1	PLATE, ILC HOLD
*	CB3-3073-000 000	C	1	CUSHION, MIRROR
	CF1-1948-000 000	C	1	LENS LOCK PIN ASS'Y
*	CG2-1786-000 000	C	1	CONTACT ASS'Y, LENS
*	CG2-1792-000 000	C	1	BASE ASS'Y, BEEP
*	CG2-1793-000 000	C	1	COVER ASS'Y, SCREEN RETAINER
*	CG2-1794-000 000	C	1	FPC ASS'Y, ILC
*	CH2-8394-000 000	N	1	WIRE, LEAD
	CS2-5020-000 000	C	1	SPRING, COIL
	CS2-7205-000 000	C	1	SPRING, MOUNT
*	CY3-1561-000 000	B	1	MIRROR BOX ASS'Y
	XA4-6170-459 000	F	2	SCREW
	XA4-9170-457 000	F	3	SCREW
	XA4-9170-459 000	F	2	SCREW
*	YN2-3578-000 000	C	1	PLATE, SI INDICATE
*	YN2-3579-000 000	B	1	PLATE, FOCUSING SCREEN

CANON DIGITAL CAMERA EOS 30D

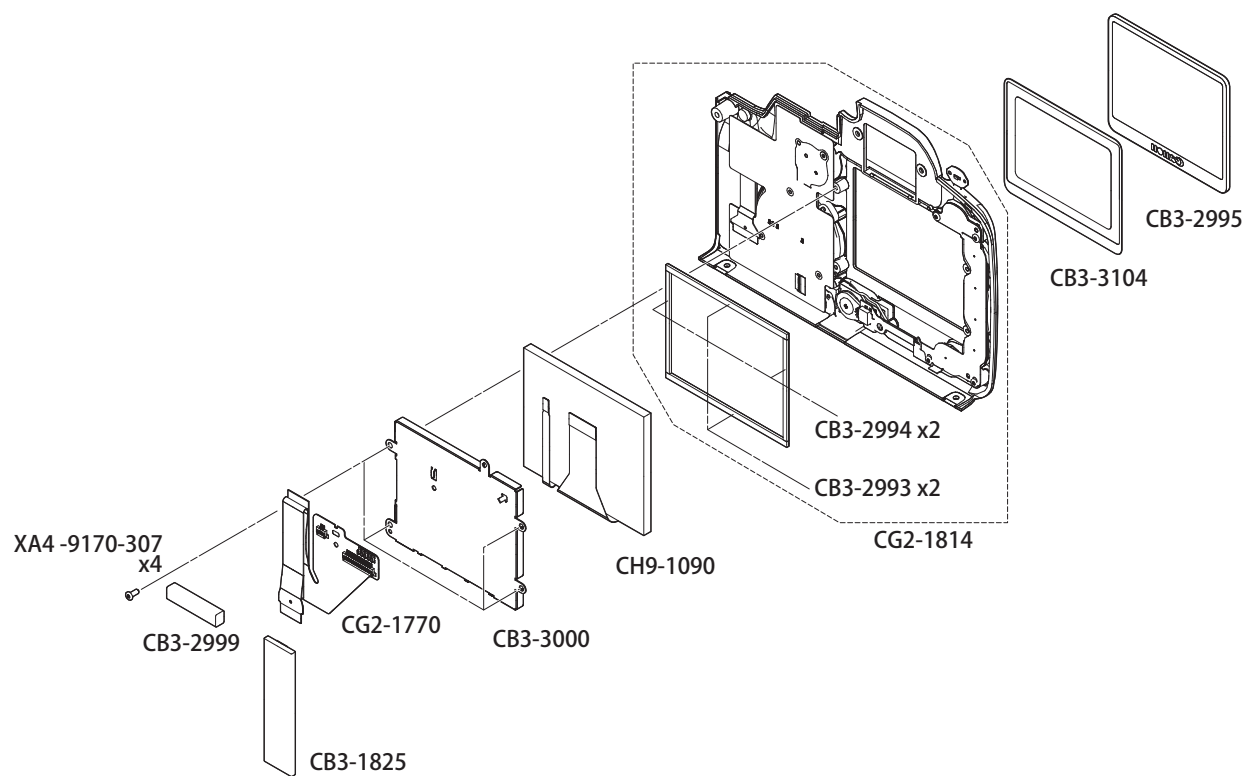


PARTS LIST

Pg. 9

REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB3-1825-000 000	C	1	GASKET, EMI, TFT
*	CB3-2993-000 000	N	2	CUSHION, TFT 1
*	CB3-2994-000 000	N	2	CUSHION, TFT 2
*	CB3-2995-000 000	B	1	WINDOW, TFT DISPLAY
*	CB3-2999-000 000	C	1	GASKET, EMI, BACK
*	CB3-3000-000 000	C	1	HOLDER, TFT
*	CB3-3104-000 000	B	1	TAPE, DOUBLE SIDE
*	CG2-1770-000 000	C	1	FPC ASS'Y, TFT-D CONNECT
*	CG2-1814-000 000	B	1	COVER ASS'Y, BACK
	CH9-1090-000 000	B	1	LCD ASS'Y, TFT
	XA4-9170-307 000	F	4	SCREW

CANON DIGITAL CAMERA EOS 30D

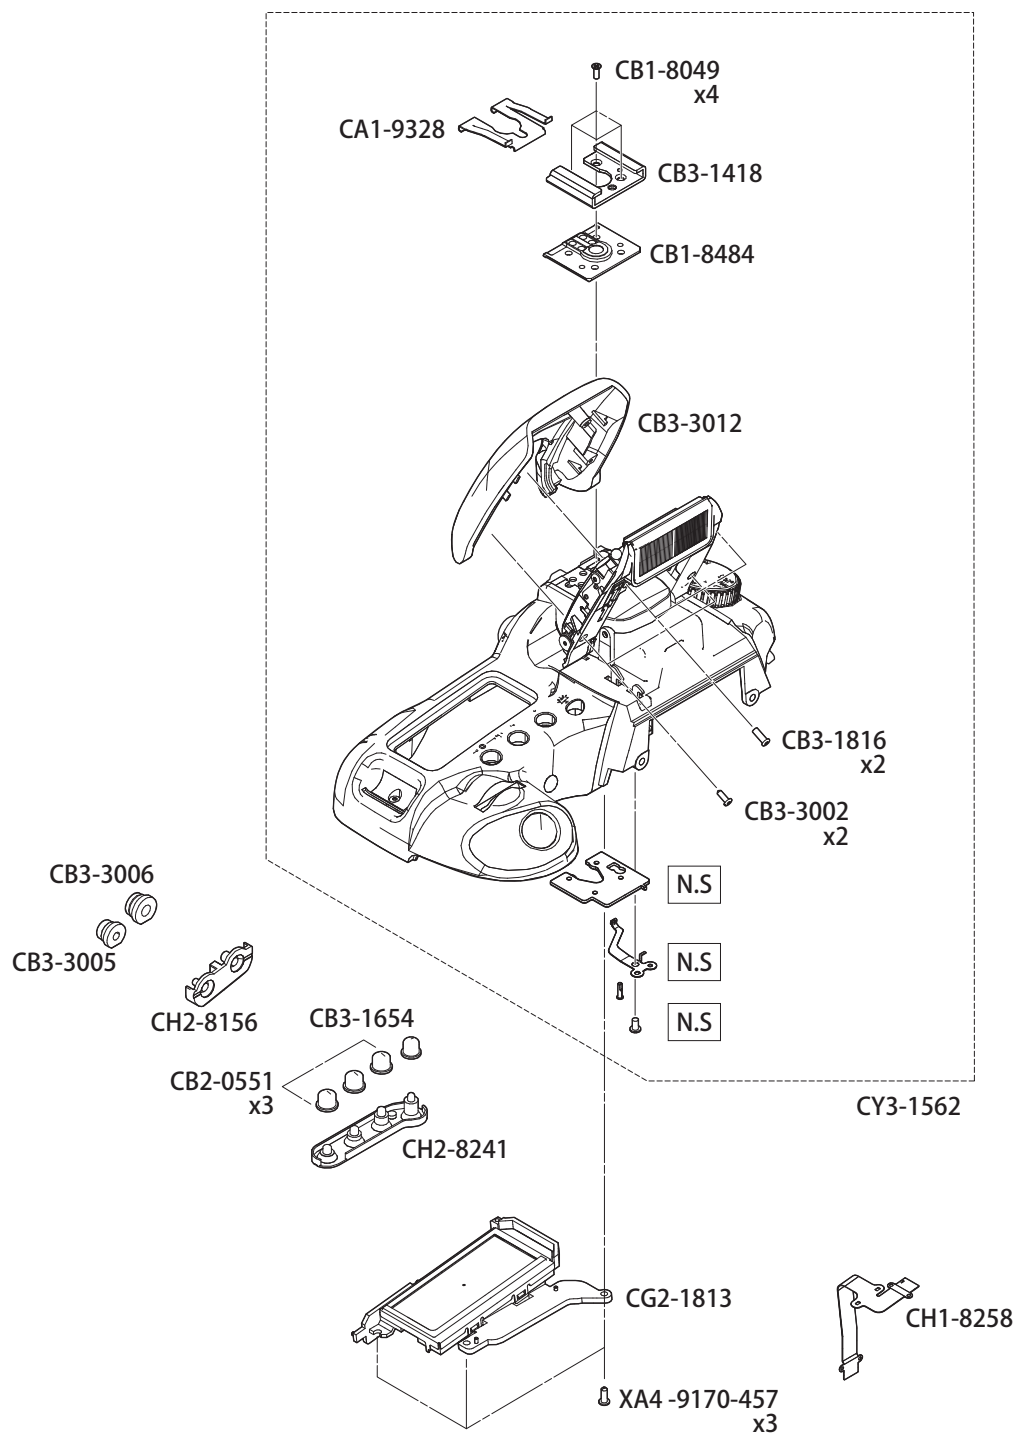


PARTS LIST

Pg. 10


REF. NO. C12-6131

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9328-000 000	C	1	SPRING, PLATE (BL)
	CB1-8049-000 000	C	4	SCREW
	CB1-8484-000 000	C	1	BASE, ACC. SHOE
	CB2-0551-000 000	C	3	BUTTON, AE MODE
	CB3-1418-000 000	C	1	SHOE, ACCESSORY
*	CB3-1654-000 000	C	1	BUTTON, LCD LIGHT
*	CB3-1816-000 000	C	2	SCREW
*	CB3-3002-000 000	C	2	SCREW
*	CB3-3005-000 000	C	1	BUTTON, AF SELECT
*	CB3-3006-000 000	C	1	BUTTON, AE LOCK
*	CB3-3012-000 000	N	1	COVER, FLASH
*	CG2-1813-000 000	C	1	LCD ASS'Y, OUTSIDE
*	CH1-8258-000 000	C	1	FPC, T-C CONNECT
	CH2-8156-000 000	C	1	SWITCH, CONDUCTIVE
*	CH2-8241-000 000	C	1	SWITCH, CONDUCTIVE
*	CY3-1562-000 000	B	1	COVER ASS'Y, TOP
	XA4-9170-457 000	F	3	SCREW


Accessories

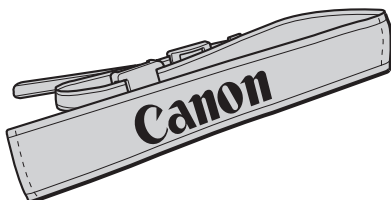Wide Strap EW-100DGR


N.S (Product Available)

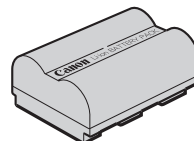**Battery Pack 511A
(BP-514/BP-511/BP-512)**


N.S (Product Available)

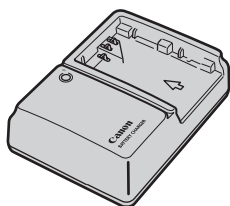Battery Charger CG-580


N.S (Product Available)

**Interface Cable
IFC-400 PCU(USB)**

N.S (Product Available)

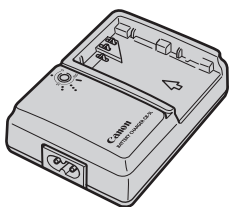
Battery Charger CB-5L

N.S (Product Available)

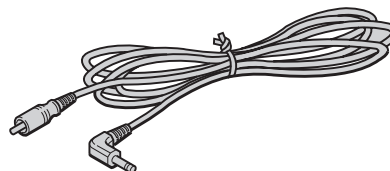Video Cable VC-100

FH6-3922

Other:
Battery Grip BG-E2
Semi-hard Case EH17-L
AC Adapter Kit ACK-E2
(AC-E2 & DR-400)

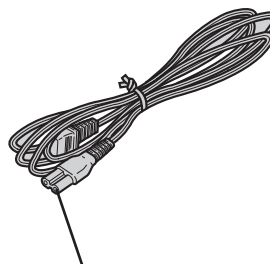AC POWER CABLE

D82-0643(EUROPE)
D82-0645-001(AUSTRALIA)
WT3-5087(CHINA)

PARTS LIST

Pg. 11

REF. NO. C12-6131

VIDEO CABLE VC-100

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	FH6-3922-000 000	N	1	VIDEO CABLE VC-100

AC POWER CABLE

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	D82-0643-000 000	C	1	CABLE, AC, EUROPE
	D82-0645-001 000	A	1	CABLE, AC, AUSTRALIA
	WT3-5087-000 000	C	1	CABLE, AC, CHINA

ELECTRIC PARTS LIST

NEW	SYMBOL	PARTS NO.	DESCRIPTION	REMARK	PAGE
*		CH2-8247-000 000	WIRE, LEAD	C-Li	6
*		CH2-8254-000 000	WIRE, LEAD	SYNC-ST	6
*		CH2-8393-000 000	WIRE, LEAD	ST-MD	7
*		CH2-8394-000 000	WIRE, LEAD	MO-MD	8
		Y11-3901-000 000	WIRE, LEAD	WHITE	
		Y11-3902-000 000	WIRE, LEAD	BLACK	
		Y11-3906-000 000	WIRE, LEAD	ORANGE	
		Y11-3907-000 000	WIRE, LEAD	YELLOW	
		Y11-3909-000 000	WIRE, LEAD	GREEN	
		Y11-3911-000 000	WIRE, LEAD	BLUE	
		Y11-5002-000 000	WIRE, LEAD	BLACK	
		Y11-5003-000 000	WIRE, LEAD	RED	
		Y11-5011-000 000	WIRE, LEAD	BLUE	
		Y11-5014-000 000	WIRE, LEAD	GRAY	

INDEX OF PARTS LIST

Pg. 13

REF. NO. C12-6131

NEW	PARTS NO.	PAGE	NEW	PARTS NO.	PAGE
	CA1-9007-000 000	6		CB3-2139-000 000	7
	CA1-9328-000 000	10		CB3-2200-000 000	3
	CB1-0279-000 000	6		CB3-2808-000 000	5
	CB1-4085-000 000	8	*	CB3-2975-000 000	1
	CB1-7982-000 000	1	*	CB3-2976-000 000	3
	CB1-8049-000 000	10	*	CB3-2981-000 000	1
	CB1-8484-000 000	10	*	CB3-2993-000 000	9
	CB2-0551-000 000	10	*	CB3-2994-000 000	9
	CB2-0604-000 000	7	*	CB3-2995-000 000	9
	CB2-0682-000 (XXX)	4	*	CB3-2999-000 000	9
	CB2-0686-000 000	5	*	CB3-3000-000 000	9
	CB2-0720-000 000	2	*	CB3-3001-000 000	7
	CB2-0722-000 000	1	*	CB3-3002-000 000	3, 10
	CB2-0727-000 000	2	*	CB3-3003-000 000	6
	CB3-1134-000 000	8	*	CB3-3005-000 000	10
	CB3-1143-000 000	3	*	CB3-3006-000 000	10
	CB3-1147-000 000	2	*	CB3-3012-000 000	10
	CB3-1418-000 000	10	*	CB3-3020-000 000	2
	CB3-1650-000 000	3	*	CB3-3021-000 000	2
	CB3-1651-000 000	1	*	CB3-3023-000 000	6
*	CB3-1654-000 000	10	*	CB3-3025-000 000	4
	CB3-1660-000 000	8	*	CB3-3030-000 000	1
	CB3-1664-000 (XXX)	8	*	CB3-3058-000 000	4
	CB3-1666-000 000	3	*	CB3-3059-000 000	5
	CB3-1700-000 000	8	*	CB3-3062-000 000	4
	CB3-1721-000 000	6	*	CB3-3063-000 000	3
	CB3-1742-000 000	7	*	CB3-3073-000 000	8
	CB3-1744-000 000	6	*	CB3-3104-000 000	9
	CB3-1770-000 000	1	*	CB3-3620-000 000	1
	CB3-1773-000 000	2		CB4-0038-000 000	3
*	CB3-1788-000 000	3		CF1-1948-000 000	8
	CB3-1803-000 000	8		CG2-1320-000 000	6
*	CB3-1816-000 000	10	*	CG2-1375-000 000	5
	CB3-1817-000 000	3		CG2-1376-000 000	5
*	CB3-1825-000 000	9	*	CG2-1765-000 000	7

INDEX OF PARTS LIST

NEW	PARTS NO.	PAGE	NEW	PARTS NO.	PAGE
*	CG2-1769-000 000	7		CH6-3221-000 000	5
*	CG2-1770-000 000	9		CH9-1090-000 000	9
*	CG2-1771-000 000	6	*	CH9-1094-000 000	7
*	CG2-1772-000 000	5		CS2-5020-000 000	8
*	CG2-1778-000 000	7		CS2-7205-000 000	8
*	CG2-1786-000 000	8	*	CY3-1558-000 000	3
*	CG2-1792-000 000	8	*	CY3-1559-000 000	4
*	CG2-1793-000 000	8	*	CY3-1560-000 000	4
*	CG2-1794-000 000	8	*	CY3-1561-000 000	8
*	CG2-1795-000 000	7	*	CY3-1562-000 000	10
*	CG2-1796-000 000	7	*	WC2-5568-000 000	6
*	CG2-1800-000 000	6		X91-1737-170 000	5
*	CG2-1801-000 000	6		XA1-3170-207 000	5
*	CG2-1802-000 000	6		XA1-3170-257 000	6
*	CG2-1803-000 000	4		XA1-3200-307 000	5
*	CG2-1804-000 000	5		XA1-7170-167 000	4, 5, 6, 7
*	CG2-1805-000 000	7		XA1-7170-227 000	3, 5
*	CG2-1809-000 000	4		XA1-7170-307 000	4, 5
*	CG2-1810-000 000	3		XA1-7170-407 000	2
*	CG2-1813-000 000	10		XA1-7170-707 000	5
*	CG2-1814-000 000	9		XA4-6170-459 000	8
*	CG2-1816-000 000	2		XA4-9170-307 000	9
*	CG2-1817-000 000	2		XA4-9170-357 000	3, 5, 7
*	CG2-1818-000 000	5		XA4-9170-407 000	4
*	CG2-1819-000 000	5		XA4-9170-409 000	6
*	CG2-1846-000 000	5		XA4-9170-457 000	3, 4, 6, 7, 8, 10
*	CH1-8258-000 000	10		XA4-9170-459 000	8
*	CH1-8409-000 000	7		XA4-9170-507 000	3
*	CH1-8415-000 000	4		XA4-9170-607 000	1
	CH2-8156-000 000	10		XA4-9170-709 000	3
*	CH2-8241-000 000	10		XA4-9200-507 000	5
*	CH2-8247-000 000	6	*	YN2-3578-000 000	8
*	CH2-8254-000 000	6	*	YN2-3579-000 000	8
*	CH2-8393-000 000	7			
*	CH2-8394-000 000	8			